

# INSTRUCTION MANUAL

## Orion® StarShoot™ USB Eyepiece II #52183



 **ORION**  
**TELESCOPES & BINOCULARS**

*Providing Exceptional Consumer Optical Products Since 1975*


**OrionTelescopes.com**

Customer Support (800) 676-1343

E-mail: [support@telescope.com](mailto:support@telescope.com)

Corporate Offices (831) 763-7000  
89 Hangar Way, Watsonville, CA 95076

© 2012 Orion Telescopes & Binoculars

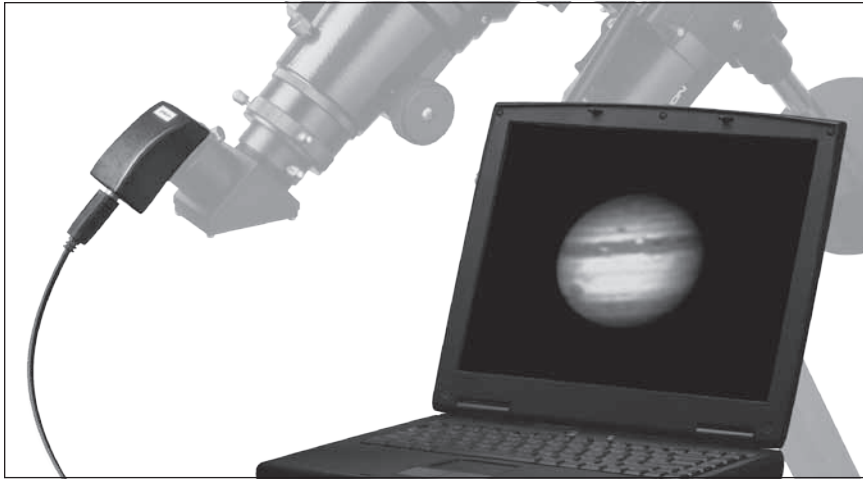

**Figure 1.** To use the SSUEII, a telescope, mount and computer are required.

Welcome to a new world of adventure. Your new StarShoot USB Eyepiece II (SSUEII) is capable of capturing detailed, full-color images of astronomical objects in our solar system. The planets, Moon, and Sun (with optional solar filter) can all be imaged to create spectacular views on your computer which can be saved for emailing or printing later. The SSUEII can even be used during the day to take images of terrestrial subjects. You'll find that this inexpensive, yet capable and easy to use camera will enhance all of your journeys with your telescope.

Please read this instruction manual before attempting to use the camera or install the needed software.

## Parts List

- StarShoot USB Eyepiece II (SSUEII)
- USB2 Cable
- CD-ROM

## System Requirements (refer to Figure 1)

### Telescope

The SSUEII can be used with virtually any telescope that is compatible with 1.25" format eyepieces. The camera simply is inserted into a focuser in the same way as a standard eyepiece (**Figure 1**). If you use a star diagonal, you should remove it before installing the SSUEII. If your telescope does not have enough inward focus travel, you will need to use an optional 1.25" Barlow lens to extend the telescope's focal plane to the camera's imaging plane (Barlow sold separately).

For most types of astro-imaging with the SSUEII, using a telescope with a focal length of at least 1000mm is recommended. Otherwise, the image scale may be too small. To increase the effective focal length of your system, use a Barlow lens or other type of tele-extender lens.

### Mount

While using an equatorial (EQ) mount is recommended to achieve the best results, one is not absolutely required for general imaging with the SSUEII. Since the maximum exposure time is only a fraction of a second, astronomical objects will not drift significantly through a telescope attached to an altazimuth mount or Dobsonian base during single image captures. Use a sturdy mount that is appropriately sized for the telescope tube being used.

For obtaining the best planetary images, however, we do recommend an equatorial mount. Planetary imaging requires combining many individual images, and having an equatorial mount will prevent the planet from drifting out of the field of view of the camera during the time it takes to acquire the large number of images necessary. A motor drive (single-axis) is recommended too, so you can track the target object as you transmit live images to your laptop or PC.

### Computer

A computer is required for normal use of the SSUEII. For astro-imaging in the field at night, a laptop computer is highly recommended. The Orion Capture software requires Windows XP, Vista or 7.

The following hardware is required:

Processor – Pentium III™ or equivalent, or higher

- Recommended minimum memory size is 256 MB.
- Disk Space – 100 MB minimum, 500 MB or more recommended for saving images.
- Video Display – 800 X 600, 16-bit color or higher. 1024x768 or higher is recommended.
- Mouse (external or built-in)


- Internet connection required to display on-line help and downloading image processing software
- USB 1.0 or High Speed USB 2.0 port

## Software and Driver Installation

Before the camera can be used, image capture software must be installed onto your computer. Turn on your computer and allow the Windows operating system to load as normal. Insert the included CD-ROM into your computer's CD-ROM drive, and the Launcher will appear (**Figure 2**). This allows you to install the Orion image capture software (Orion AmCap),.

### Capture Software Installation


1. Click **Install Capture Software**.
2. The **Orion AmCap Setup Wizard** appears. Click **Next**.
3. Select a destination folder and Click **Next**.
4. Click **Next** again to start the installation.
5. When the wizard is complete, click **close**. This has installed the capture software.
6. When installation is complete click the **Finish** button.
7. Plug in the camera into your computer's USB port. A **Found New Hardware** notification will appear in your Windows task bar (**Figure 3**).
8. Wait a few moments and the camera will automatically install on your computer. When **Device Installed Successfully** notification appears you will be ready to use the camera.

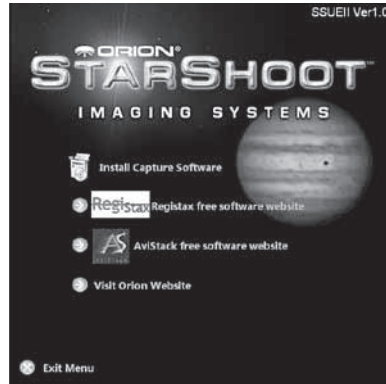

**Figure 2.** The launcher provides an easy menu for software installation.



**Figure 3.** When initially connecting the SSUEII to a computer, a Found New Hardware notification will appear and automatically install the camera to your computer.

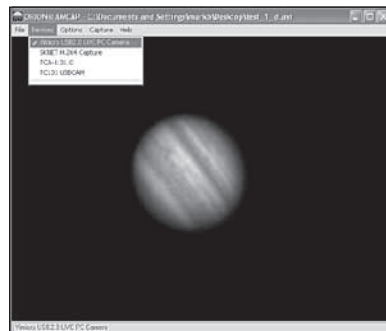

**Figure 4.** The live video window.

9. Open Orion AmCap from the icon on your desktop. The **Live Video Window** should appear (**Figure 4**). The software will recognize many cameras so check that Vimicro USB2.0 UVC PC Camera is selected from the device menu.

## Image Processing Software

Website links are provided in the launcher to download popular free image processing software to be used with your AVI files to enhance your astro images.

Image Processing Software such as RegiStax or AviStack; can Align and Stack(combine) hundreds of individual images into a single resultant image and perform some additional image processing to bring out subtle details or to make the image appear more pleasing overall (**Figure 11**).

Both software applications are a recommended addition to any astro-imagers arsenal of image processing software.



### Image Processing Software Installation

Return the launcher and select RegiStax or AviStack to be directed to a website to download the latest software.

For detailed information on the image processing software consult the websites of each software Provider. Tutorials and user groups can be found online also.


## Getting Started During Daylight

We recommend using the SSUEII for the first time during the day. This way, you can become familiar with the camera and its functions without having to stumble around in the dark. Set up your telescope and mount so the optical tube is pointing at an object at least a couple of hundred feet away. Insert an eyepiece and focus as you normally would.

To obtain first images with the SSUEII, follow these step-by-step instructions:


1. Plug the camera into your computer's USB port.
2. Double click the Orion AmCap icon now installed on your computer's desktop.
3. Orion AmCap will automatically connect directly to your camera with a **Live Video Window**. Your **Live Video Window** will only show light and dark before the camera is coupled to your telescope.
4. The native resolution of the camera sensor is 640x480 and can be set from the options menu. To change to resolution select Video Capture Pin

from Options menu, select desired resolution (normally 640x480) under the **Output Size** heading, then click **OK** (Figure 5). The **Live Video Window** will now display at the selected resolution. Any images captured with the camera will now also be set at the same resolution. To move the **Live Video Window** out of the way, click on the top bar of the window and drag it to the desired location on the computer screen.

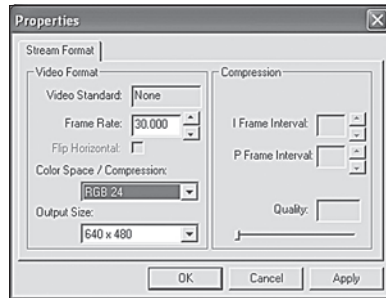


**Figure 5.** Changing resolution via options->Video Capture Pin.

- To connect the camera to the telescope, simply replace the telescope's 1.25" eyepiece with the camera. Make sure the securing thumbscrew on the focuser drawtube is tightened after the camera is inserted.

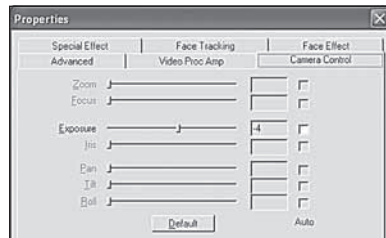

**Figure 6.** Changing exposure via options->Video Capture Filter->Camera Control Tab.

- You will now need to refocus the camera for the centered object. Focusing will be the hardest thing to learn in the initial stages. If you are starting out in daylight, as is recommended, you may need to turn the exposure and/or brightness control of the camera down before attempting to focus. This is done by selecting Video Capture Filter in the Options menu and moving the exposure (Figure 6) or brightness slider (Figure 7). If the daytime image brightness is still too bright to produce an acceptable image on your computer screen, you may need to stop-down the aperture of your telescope.

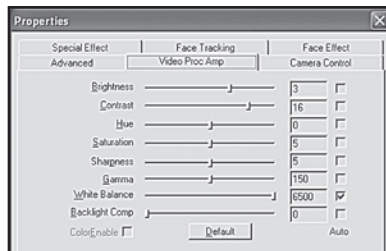

**Figure 7.** Changing Brightness and Contrast via options->Video Capture Filter->Video Proc Amp Tab.


- Look at the **Live Video Window** on the computer screen and adjust the focus knob accordingly to determine best image focus.

*Note: The camera's field of view is fairly small. It is approximately equivalent to the field of view through the telescope when looking through a typical (i.e. not wide-field) 5mm focal length eyepiece (Figure 9).*

- Image orientation can be changed by rotating the camera within the focuser drawtube. Simply loosen the thumbscrew on the drawtube and


rotate the camera until the desired image orientation is achieved. Retighten the thumbscrew on the focuser drawtube when done. You may need to slightly refocus (using the telescope's focus knob) if the focuser drawtube has moved a bit inward or outward when the camera was rotated.

The image can also be flipped in horizontal or vertical by selecting Video Capture Filter in the Options menu and clicking on horizontal and/or vertical checkbox (Figure 8).

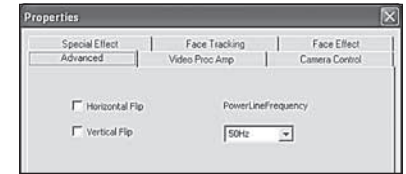

**Figure 8.** Changing image flip via options->Video Capture Filter->Advanced Tab.

*NOTE: The Special Effect, Face Tracking and Face Effect options in the Video Capture Filter are not used for Astronomy purposes.*

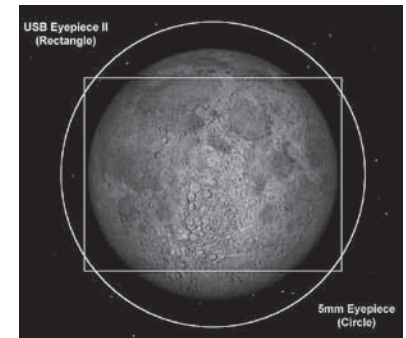

**Figure 9.** The camera's field of view is comparable to a 5mm focal length eyepiece. This example uses an Orion ShortTube 80mm Telescope.

- Select **Set Capture File** from the **File** menu and name your file including the AVI extension name. IE mymovie.avi. Click **Open**.
- Enter the amount of disk space to allocate as a buffer for this data. Movie files need a large amount of disk space. Enter a value such as 50 Megabytes or higher. Press **OK**. The size of the captured data may be much higher than this value depending upon number and size of frames captured.
- Select **Set Frame Rate** under the **Capture** menu. Check the box **Use Frame Rate** and type 30. Press ok.
- Select **Set Time Limit** under the **Capture** menu. Check the box **Use Time Limit** and type 20. Press **OK**.
- Select **Start Capture** under the **Capture** menu.
- Press **OK** when you are ready to capture Images.

An AVI movie sequence of 600 frames (30 frames per second x 20 seconds) will now be recorded.

The total number of captured frames is displayed on the bottom bar. If frames are being dropped this will be displayed and the frame rate or resolution should be set to a lower value to prevent this.

You have now taken your first images with the SSUEII! This simple method of imaging is exactly how the camera is used to capture terrestrial subjects

during daylight hours. Close-up images of birds and other wildlife or faraway vistas can all be obtained in this way with the SSUEII. Solar images can also be taken during the day with an optional full-aperture solar filter over the front of the telescope.

Take some time to use the camera and Orion AmCap software during the day to become familiar and comfortable with their basic operation. For best results, you can optimize your images with the camera controls.

## Camera Controls

For best images, you can adjust the camera controls through Orion AmCap to fine tune the image. You can see how the camera controls affect an image in the **Live Video Window**.

From the Options menu choose **Video Capture Filter** and you can access the camera controls under Video Proc Amp, Camera and Advanced tabs. Here you will find the **Brightness**, **Contrast**, Gamma, Hue, **Saturation** (level of color), **Sharpness** (keep this low as it can add noise), and **Exposure** controls. The **Exposure** control is a gain adjustment that allows additional flexibility in adjusting image brightness. You can either manually adjust this by unselecting the **Auto** box and manually moving the slider, or have automatic adjustment by leaving the **Auto** box selected. Other options such as Gamma and White Balance will aid in tuning the live view however it is recommended to only modify exposure and brightness if images are to be software processed later. To return the camera controls to their default settings, click the **Reset** button.

The other camera controls are available by selecting **Video Capture Pin from the Options menu**. This accesses the Stream Format property sheet, which allows you to set additional parameters. The **Frame Rate** should generally be left at 30 frames per second for the sharpest planetary images. This value may be overridden if the use Frame Rate box is checked in the Capture -> Set Frame Rate menu. (You can also use the **Video Capture Filter** selection described previously to adjust image brightness.)

Try several different settings to get a feel of how the camera controls work and affect the resultant image on the computer screen. The **Brightness** and **Exposure** controls are the ones you will use the most. The telescope being used, seeing conditions, and object being imaged will dictate how these camera controls should be set. Usually Exposure will be set first and then Brightness is adjusted as needed.

## Astronomical Imaging

Now that you're familiar with basic camera and software operation, it's time to take the SSUEII out at night under the stars to capture some astronomical

images. We recommend starting with the Moon, as it is easy to acquire into the camera's field of view, and typically does not require stacking of multiple exposures as planetary images do.


### Imaging the Moon

Imaging the Moon is much like imaging terrestrial objects during the day. Since the exposure is very short, it is not critical that the telescope be precisely polar aligned.

When the moon is past half full, it is hard to get detail due to the tremendous glare off of the lunar surface. Most detail, even on a sliver of a moon, will be at the terminator (that tiny thin line between the shadow and light, see **Figure 10**). To get more of the moon in the image, a focal reducer will need to be used. For close-ups of craters use a barlow lens (see "Using Focal Reducers and Barlow Lenses").



**Figure 10.** The moon's surface detail looks the best along the terminator.

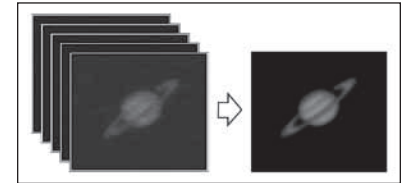

**Figure 11.** Planetary Stacking.

### Imaging Planets

The best planetary images will be obtained by stacking (combining) many individual images in order to improve image contrast, brightness, and detail (**Figure 11**).

A great way to obtain images for stacking is to take several seconds of video of the planet, then break the video into individual frames for stacking. Since the SSUEII has a maximum frame rate of 30 frames per second at maximum resolution, you can literally obtain hundreds of images for stacking in seconds! You save time by taking one video instead of dozens of individual pictures!

Since you will be taking multiple images over a period of time, it is important you have a decent polar alignment in order to keep the planet within the field of view of the camera. To this end, having a motor drive (at least single-axis) will also be helpful. Otherwise, you will periodically need to rotate the R.A. slow-motion knob to keep the planet within the camera's field.

## Tips

### Focusing

One of the hardest things to do in planetary imaging is achieving good focus. You can make this process easier by simply watching the **Live Video** window



---

to focus. Depending upon the viewing conditions you may notice that the image goes in and out of focus - this is due to viewing conditions. This is to be expected and one of the reasons why post processing software can bring out the best in your captured images. Focus as best as possible with the average frame being at best focus to ensure more in focus frames than out of focus. Image processing software can then be used to select the best frames to combine for best results.

Refocus often throughout your imaging session. This ensures at least some of your images will have an excellent focus. It is also not uncommon for telescope movements to alter the focus slightly, so be sure to refocus for any new astro-imaging targets.

### **Choosing a Site for Astro-imaging**

Once you have a focused image, you may find your image shifting and washed out. This can be caused by many environmental factors. Poor seeing (movement of molecules in the air, such as heat rising) and poor transparency (moisture, smoke, or other sky contaminants) will all serve to reduce image quality. That is why most major astronomical telescopes are on high mountains in thin air, to get above much of the seeing and transparency problems. Also, wind will move your telescope and affect images. Your eyes viewing through an eyepiece can change slightly to compensate for disturbances like these, but the camera cannot. Keep these factors in mind when choosing an observing site for astronomical imaging.

For the best astro-images, we recommend finding a location with dry air, some altitude, and away from city or streetlights. Even a nearby hilltop in the countryside can provide better viewing conditions than many convenient backyard locations.

### **Loss of Camera Connection**

If the computer connection to the camera is interrupted, you will need to re-establish connection. This can happen due to several reasons; if a cable becomes unplugged, the computer “freezes”, or the software/hardware otherwise temporarily loses the data coming from the camera.

To re-establish camera connection, first close the Orion AmCap program on your computer. Then, unplug and re-plug the camera into the computer's USB port. Now, open Orion AmCap, and the **Live Video Window** should appear indicating re-established connection between camera and computer.

### **Using Focal Reducers and Barlow Lenses**

Focal reducers serve to decrease the focal length of your telescope. This increases the field of view seen by the camera (decreases camera magnification). This can be useful for obtaining images of wider objects, such as the full Moon or a landscape vista.

---

Barlow lenses, or other tele-extenders, increase the focal length of your telescope, which makes the camera field of view narrower (increases camera magnification). This is useful for high-power planetary images. Keep in mind that when the focal length is doubled, the image will become four times dimmer, so a longer exposure may be necessary.

For best planetary imaging, you should shoot with an effective focal ratio (telescope focal length ÷ telescope aperture) of F/20 or greater. This will give you a good combination of image brightness and image scale for planets. For most telescopes, a Barlow lens will be required to obtain this focal ratio. For example, Schmidt-Cassegrain telescopes usually have a focal ratio of F/10. A 2x Barlow lens doubles the effective focal length of the telescope, which makes the focal ratio f/20. Similarly, a 3x Barlow lens will yield of focal ratio of F/30. You can also try using multiple Barlows to obtain even greater effective focal ratios. There is a limit to how large a focal ratio your telescope and seeing conditions can handle, however. Experimentation will be needed to see what your telescope is capable of in the seeing conditions on a given night. If the image appears somewhat dim and fuzzy on the computer screen, you may want to consider removing the Barlow lens.

(Focal Reducers and Barlow lenses available through Orion, check the catalog or [www.OrionTelescopes.com](http://www.OrionTelescopes.com) for more information).

### **Filters**

For some types of planetary imaging, you may want to use color filters to bring out subtle details. Any standard Orion 1.25" filter will thread into the front of the SSUEII's barrel. Try using different color filters on a planet to see which filters help best show planetary details.

Neutral-density Moon filters and variable-polarizer filters are useful to reduce the glare from the moon. They can also be used to reduce the glare from Venus.

### **Solar Filters**

*Warning: Always use a full aperture solar filter when viewing the sun.*

With a properly fitting full-aperture solar filter attached to your telescope, you can use the SSUEII to take images of the Sun and the sunspots on its surface.

(Filters available through Orion, check the catalog or [www.OrionTelescopes.com](http://www.OrionTelescopes.com) for more information).

### **Flip Mirror**

As easy as flipping a switch, the Imaging Flip Mirror enables the astrophotographer to find, center and focus a target visually with a 1.25 telescope eyepiece, then photograph it with a CCD camera. All without swapping out any equipment. It's a real timer saver, making the normally tedious task of focusing with the CCD camera alone easier and quicker.

(Available through Orion, check the catalog or [www.OrionTelescopes.com](http://www.OrionTelescopes.com) for more information).

### USB Extension Cable

In many instances, it is likely that a longer cable for the SSUEII will be needed in order to comfortably setup telescope, camera, and computer. We recommend purchasing a 10' USB extension cable if you need more cord length

(available through Orion, check the catalog or [www.OrionTelescopes.com](http://www.OrionTelescopes.com) for more information).

## Things to do

### Moon

- Learn your way around our closest celestial neighbor.
- Image the craters and mares.
- Image the different phases from New moon to Full Moon
- Image the detail at the terminator
- Create a moon mosaic



**Figure 12.** Moon Mosaic. Use software to assemble individual frames to create a higher resolution image.

### Planets

- Take a movie of the position of the great red spot of Jupiter during the Gas Giant's <10 hour day.
- Image Jupiter's moons and their shadows as they transit across the Gas Giant
- Follow in Galileo's footsteps by Imaging the different phases of Venus

### Solar

- Using a full aperture Solar Filter to image sunspots, eclipses and transits

### Terrestrial

- Image animals from a far distance so as not to disturb feeding and nesting spots



**Figure 13.** Crescent phases of Venus.



**Figure 14.** Venus Transit and Sunspots.

## Specifications

Sensor:	Color CMOS sensor
Sensor size:	1/4"
Number of pixels:	640 x 480 pixel layout; 0.3 megapixel resolution
Pixel size:	6.0µm x 6.0µm
Video frame rate:	up to 30 frames/second
A/D conversion:	8 bit
IR filter:	Yes
Spectral Range:	400-650nm (with IR Filter)
Connection:	USB 1 or 2
Barrel:	1.25" threaded for filters

---

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Changes of modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

*Reorient or relocate the receiving antenna.*

*Increase the separation between the equipment and receiver.*

*Connect the equipment into an output on a circuit different from that to which the receiver is connected.*

*Consult the dealer or an experienced radio/TV technician for help.*

*A shielded cable must be used when connecting a peripheral to the serial ports.*

---

## **One-Year Limited Warranty**

This Orion StarShoot USB Eyepiece II is warranted against defects in materials or workmanship for a period of one year from the date of purchase. This warranty is for the benefit of the original retail purchaser only. During this warranty period Orion Telescopes & Binoculars will repair or replace, at Orion's option, any warranted instrument that proves to be defective, provided it is returned postage paid to: Orion Warranty Repair, 89 Hangar Way, Watsonville, CA 95076. If the product is not registered, proof of purchase (such as a copy of the original invoice) is required.

This warranty does not apply if, in Orion's judgment, the instrument has been abused, mishandled, or modified, nor does it apply to normal wear and tear. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. For further warranty service information, contact: Customer Service Department, Orion Telescopes & Binoculars, 89 Hangar Way, Watsonville, CA 95076; (800) 676-1343.



**OrionTelescopes.com**

**89 Hangar Way, Watsonville, CA 95076**

**Customer Support Help Line (800) 676-1343**

© 2012 Orion Telescopes & Binoculars